


STAP (DN 15-50)

Exchange of handwheel
Byte av ratt

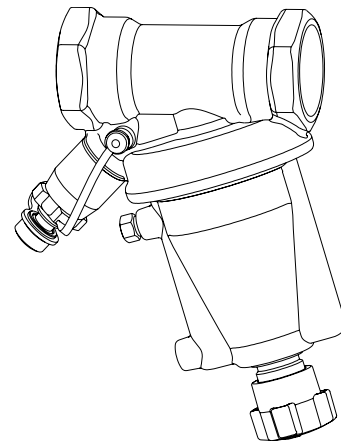

*We reserve the right to introduce technical alterations
without previous notice.*

IMI
Hydronic Engineering

www.imi-hydronic.com

IMI Hydronic
Engineering

1.



2.



3. a



3. b



1. Open the valve until the handwheel comes loose (pass the stop) and remove the handwheel.
2. Place the new handwheel and close the valve completely with the handwheel.
3. Place the new lock washer **(a)** and fasten it by using a cylindrical tool, e.g. a socket or similar **(b)**. Be careful not to damage the handwheel.
4. Open the valve fully until stop, then close the valve 1/4 turn.

1. Öppna ventilen tills ratten lossnar (förbi stoppet) och avlägsna ratten.
2. Skruva på ny ratt och stäng ventilen helt med ratten.
3. Placera den nya låsbrickan **(a)** och sätt fast den med ett cylindriskt verktyg, t ex en hylsa eller liknande **(b)**, utan att skada ratten.
4. Öppna ventilen fullt (till stopp) och stäng därefter 1/4 varv.