



TA Fast-Fit 4



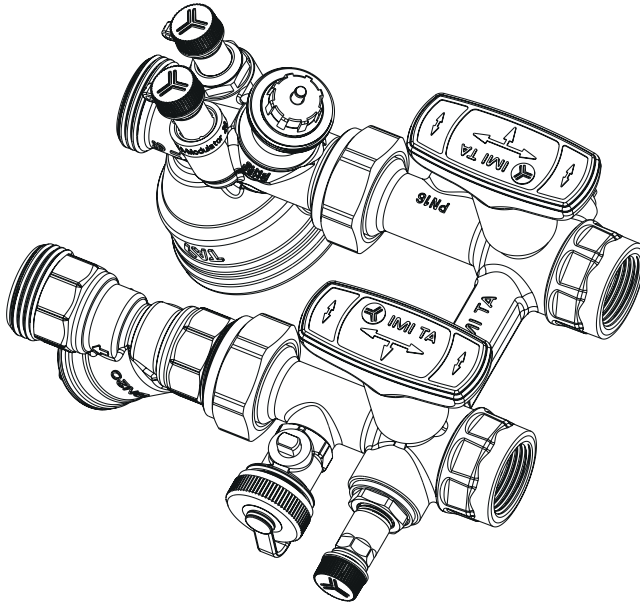



www.imi-hydraulic.com

TA-Modulator/TA-COMPACT-P

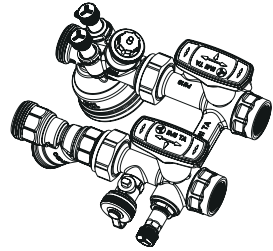

NOTE! Assembly example, product components may vary.

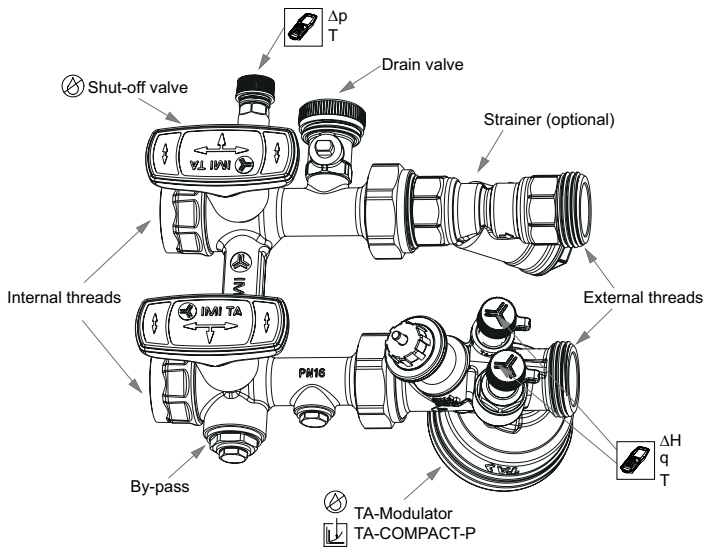

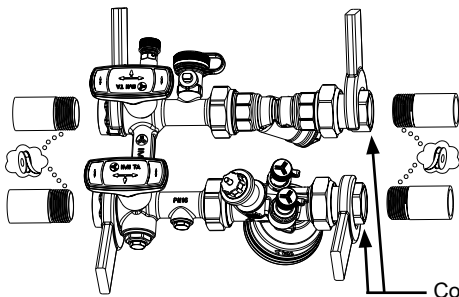

NOTE!

It is not allowed to hold the TA Fast-Fit 4 assembly, during installation, on other places then indicated by the wrenches in the illustration.

Max. torque ≤ 50 Nm


Couplings are not included!

Couplings (accessory)

With internal thread. Swivelling nut.


Threads according to ISO 228. Thread length according to ISO 7-1.

Valve DN	D	D1	L*	Article No
10	G1/2	G3/8	21	52 163-010
15	G3/4	G1/2	21	52 163-015
20	G1	G3/4	23	52 163-020
25	G1 1/4	G1	23	52 163-025
32	G1 1/2	G1 1/4	31	52 163-032

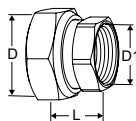


*) Fitting length (from the gasket surface to the end of the connection).



EMO T / EMO TM

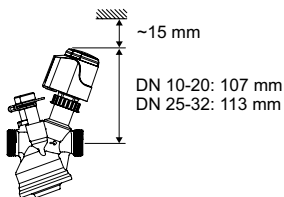


TA-Slider 160

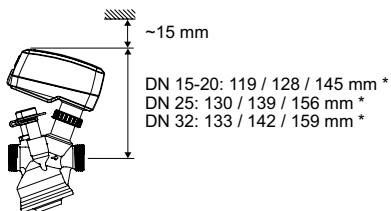

*) Height depending on actuator version.

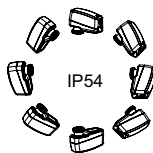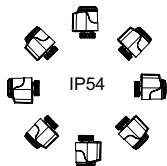


Normal operation

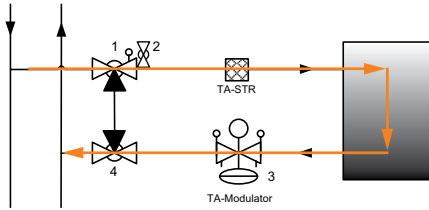


1. Open
2. Closed
3. Open
4. Open

Back flushing

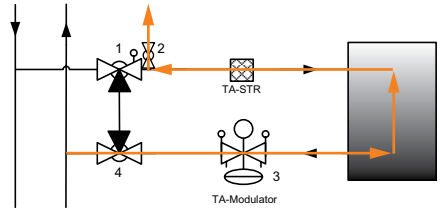


1. Closed
2. Open
3. Open
4. Open

Flushing the distribution system

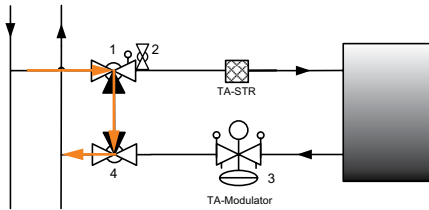


1. Closed
2. Closed
3. Open
4. Closed

Forward flushing

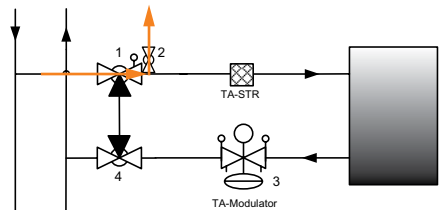


1. Open
2. Open
3. Closed
4. Open


Open

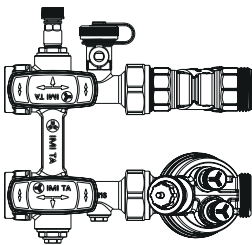









Closed









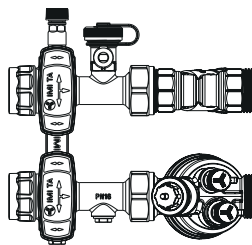


Flushing the distribution system

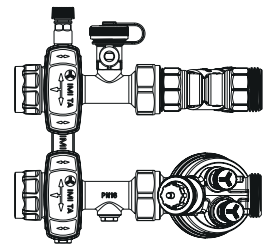

TA-Modulator / TA-COMPACT-P

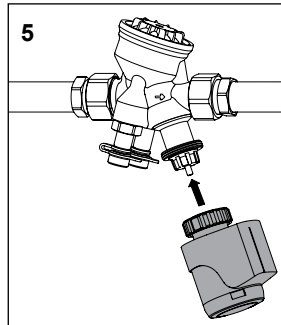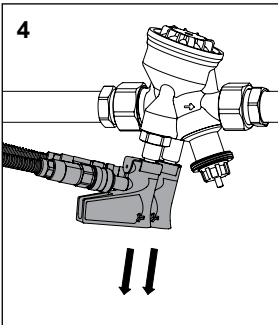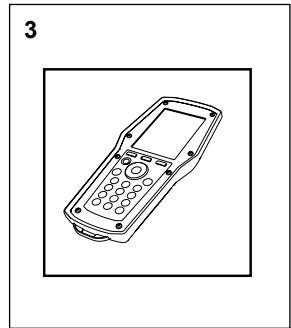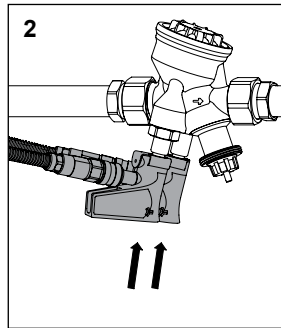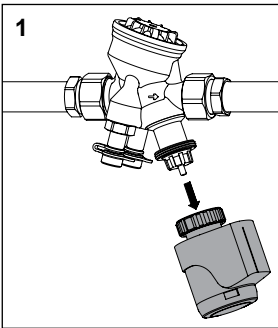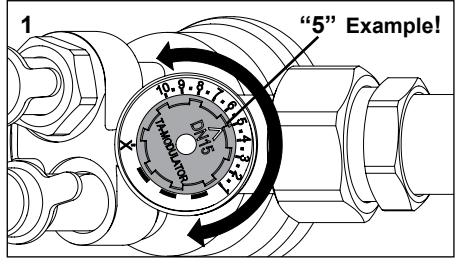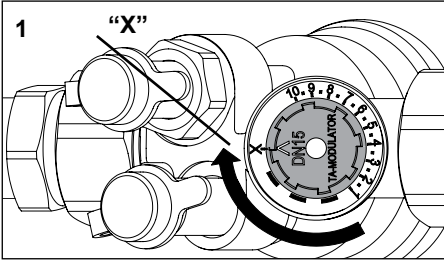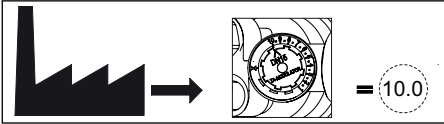

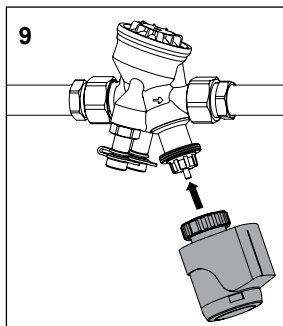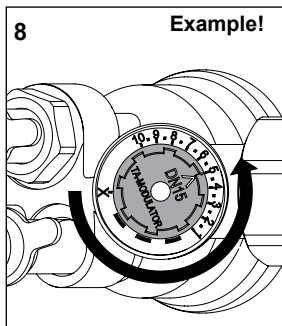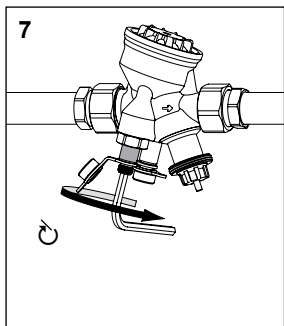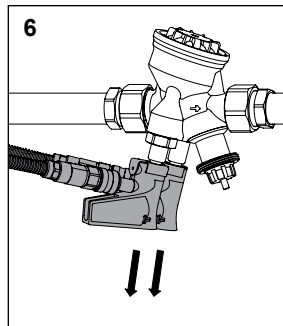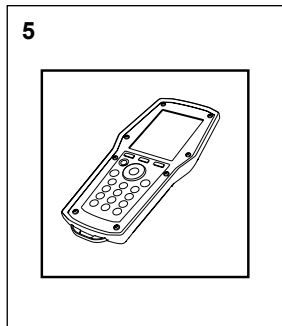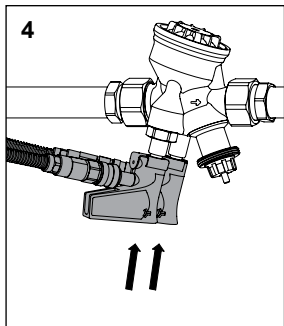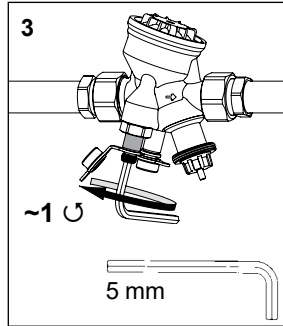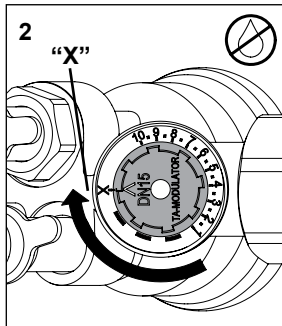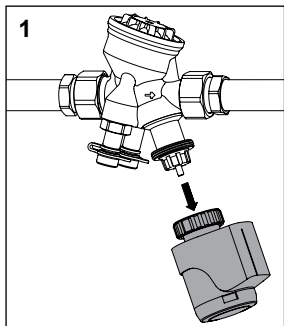

We reserve the right to introduce technical alterations without prior notice.