

# TA SCOPE

US



*we knowhow*



## Contents

Introduction .....	5
Instrument and Measuring Equipment.....	6
Guide to Manual and Instrument .....	8
Handheld Display	8
Abbreviations	9
Display and Keypad .....	10
Display and Information Bar Icons	10
Keypad and Keypad Icons	10
Functional Contents	11
Measuring Preparations.....	12
Prerequisites for Balancing with TA-SCOPE	12
Switch on/off the units	12
Wireless Communication	13
Connect / Disconnect Measuring Equipment	14
Calibration of Dp Sensor	15
Handwheel	16
Connections for Cables	16
Hydronic Functions .....	17
Quick Measure.....	18
Measure Flow	18
View Saved Measurements	20
Flow Adjustment – Computer Method	20
Measure Differential Pressure ( $\Delta p$ )	22
Measure Temperature	22
Measure Power	23
Hydronic Networks.....	25
Navigate Hydronic Networks	25
Edit Existing Network	26
Delete Network	27
Create a Hydronic Network	27
Balancing .....	29
Balance a Hydronic Network with TA Balance	29
Troubleshooting .....	33
Data Logging .....	34
Start a New Logging	34
Download Loggings	37
View Loggings	37

Support Functions ..... 39

Fluid ..... 40

    Change Fluid ..... 40

Hydronic Calculator ..... 41

    Calculate Flow/Cv/Dp ( $\Delta p$ )/Power/DT ( $\Delta T$ ) ..... 41

    Calculate Valve Opening ..... 42

    Recommend Pipe Dimension ..... 42

    Recommend Valve Dimension ..... 42

    Unit Conversion ..... 43

Settings ..... 44

Information ..... 46

PC Communication ..... 47

    Transfer of Data ..... 47

    Software Upgrade ..... 47

Instrument Care and Service ..... 48

    Batteries – Capacity & Charging ..... 48

    Filter Cleaning ..... 50

    Calibration Certificates ..... 50

Guarantee ..... 51

FCC Notification and ETL Markings ..... 52

Technical Specifications ..... 53

Accessories ..... 55

*TA-SCOPE includes software licensed from OMRON SOFTWARE Co., Ltd. Advanced Wnn® OMRON SOFTWARE Co., Ltd. 2002 – 2010. All rights reserved.*

**!** **Note!** The products, texts, photographs, graphics and diagrams in this brochure may be subject to alteration by Tour & Andersson AB without prior notice or reasons being given. For the most up to date information about our products and specifications, please visit [www.tourandersson.com](http://www.tourandersson.com)

**Introduction**



TA-SCOPE is a tough, effective balancing instrument for accurate measuring and documenting of differential pressure ( $\Delta p$ ), flow, temperature and power in hydronic systems.

Wireless functionality and an easy-to-use interface ensure quicker and more cost-efficient balancing and trouble shooting.



TA-SCOPE links effortlessly to the PC software – TA Select – gaining the maximum benefit from recorded data and enabling professional report writing and automatic software upgrades.

TA-SCOPE consists of two main components:

**Handheld unit** – computer based unit programmed with the TA valve characteristics. Straightforward functions with easy-to-follow instructions on the color display.

**Differential Pressure Sensor unit** – the Dp Sensor communicates wirelessly with the Handheld and has a LED indicator for indicating communication status and battery capacity.

## Instrument and Measuring Equipment

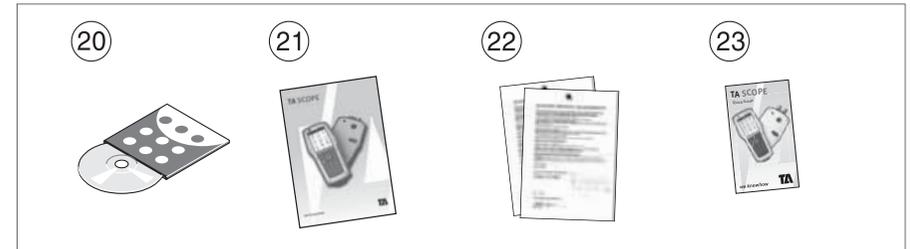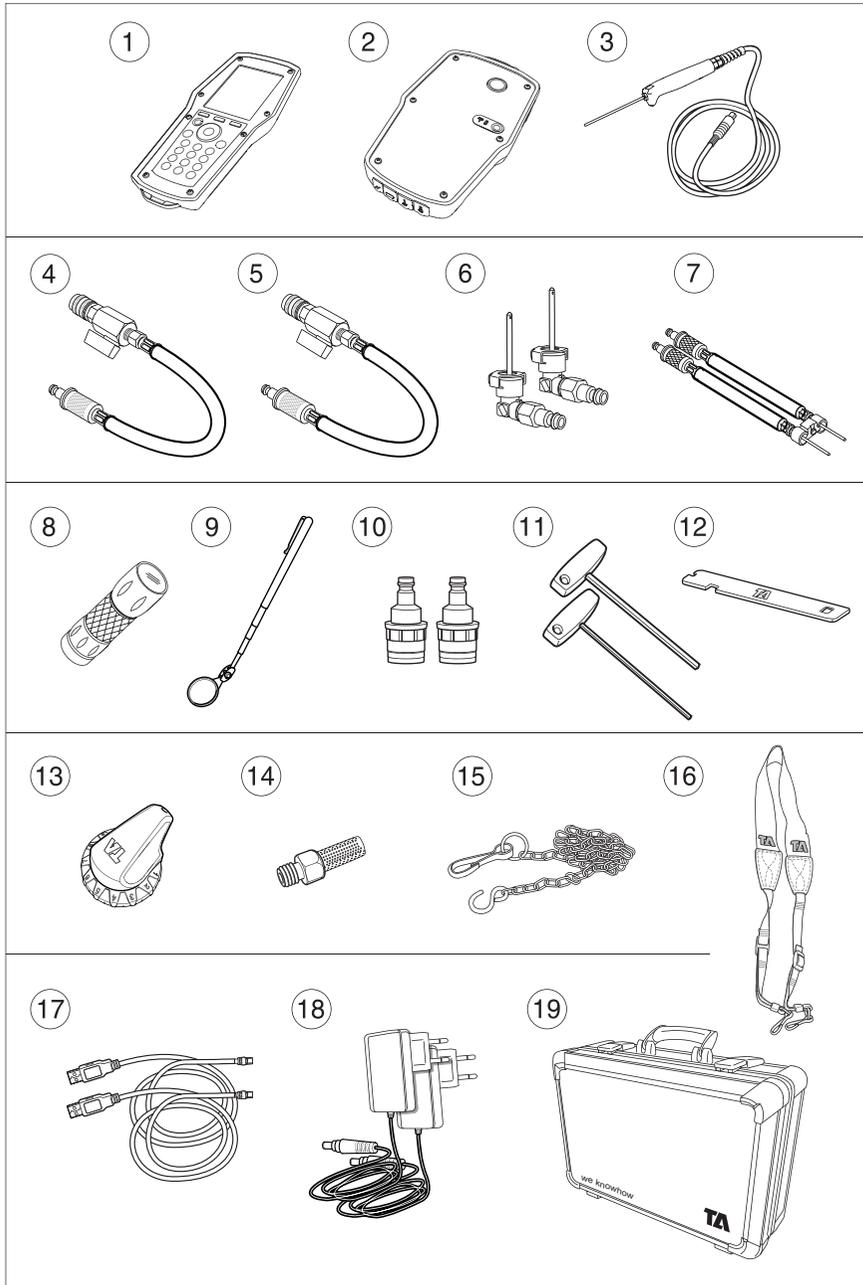

- 1 Handheld unit (Hh)
- 2 Dp Sensor unit (DpS)
- 3 Digital Temperature Sensor (DTS)
- 4 Measuring hose, 400 mm red
- 5 Measuring hose, 400 mm blue
- 6 Measuring needles
- 7 Measuring hoses with twin needle, 150 mm
- 8 Flashlight
- 9 Mirror
- 10 Chucks for older valves, red/blue
- 11 Allen Keys 3 mm/5 mm
- 12 Spanner for measuring points on older valves
- 13 Presetting tool TBV-C/TBV-CM/TBV-CMP
- 14 Spare filters
- 15 Chain for mounting
- 16 Neckstrap
- 17 USB-cables for connection; Hh – DpS and Hh – PC
- 18 Charger for Handheld and Dp Sensor
- 19 Case
- 20 TA-Select Software
- 21 User manual
- 22 Calibration certificates for DpS and DTS
- 23 Quick Guide

## Guide to Manual and Instrument

### General Instrument Instructions

TA-SCOPE facilitates effortless performance of all hydronic functions through easy to navigate menus.

### Handheld Display

The display is divided into three areas, the Information bar, the Main display and the Function keys.



#### 1 – Information bar

Icons on the Information bar display details of battery status, connection type and intensity.

#### 2 – Main display

Instructions on how to carry out hydronic functions are shown on the Main display.

#### 3 – Function keys

The three top keys on the key board are used for selecting options shown in the lower part of the Main display. The options vary depending on which menu is currently shown.

### Keypad

- The alphanumeric keys function in the same manner as most mobile phones. Select a letter by repeatedly pressing the key until the desired letter appears. Prolonged press enters a digit.
- Dot key works as caps lock. For a dot keep the key pressed until a dot appears.
- The zero key works as a space bar.



**Tips!** The numbers 1-9 can be used to shortcut the menus in the main display.

### Entering Information in Menus


- When entering values to an input field in a menu, navigate  $\Delta \nabla$  to the desired row and start typing.
- Cycle  $\leftarrow \rightarrow$  the options in the input fields.
- Change units from the menu for any of the hydronic functions by navigating  $\Delta \nabla$  to the desired row and cycle  $\leftarrow \rightarrow$  the units.
- Increase/decrease values like valve size, time, date direct from the input field by cycling  $\leftarrow \rightarrow$  the options.
- To prevent entering a too high or too low value TA-SCOPE automatically corrects values in the input fields. The maximum/minimum value will appear in red, accompanied by a beep.

### Special Menu Features



If multiple temperature sensors are connected when measuring, cycle the sensors by navigating  $\Delta \nabla$  to the temperature row and press enter. An icon  on the display indicates which of the sensor is currently showing temperature reading.

The temperature to be considered for fluid properties can be taken either from one of the connected temperature sensors or from direct input in the fluid screen. Navigate  $\Delta \nabla$  to the icon beside the fluid field and press enter to cycle amongst the available options.

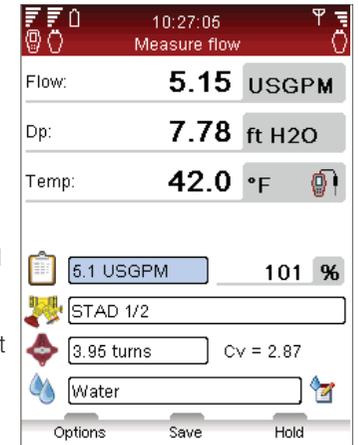

### Abbreviations

Hh	Handheld unit
DpS	Differential Pressure Sensor unit
DTS	Digital Temperature Sensor
Dp / $\Delta p$	Differential Pressure
DT / $\Delta T$	Differential Temperature
q	Flow
P	Power
T	Temperature

## Display and Keypad

### Display



### Information Bar Icons

	Battery status bar
	Charging of battery
	Battery symbol
	Handheld
	Dp Sensor
	Wireless communication
	Intensity of wireless signal
	Wireless signal set to Off
	Connection by cable

### Keypad



### Keypad Icons

	Function key <i>Options depend on text in display</i>
	On/Off
	Flow adjustment (Computer method) <i>Short cut button</i>
	Return/Escape
	Enter
	Navigation up/down
	Navigation right/left
	Alphanumeric <i>0-9, A-Z plus symbols</i>

## Functional Contents

	<b>Quick Measure</b> <i>Page 18</i>	Measure Flow Measure Differential Pressure ( $\Delta p$ ) Measure Temperature Measure Power View Saved Measurements
	<b>Hydronic Networks</b> <i>Page 25</i>	Navigate Hydronic Networks Add New Network Edit Network Delete Network Measure, Balance & Log Functionality
	<b>Balancing</b> <i>Page 29</i>	Balance Tolerance Balance Existing Hydronic Network Balance Newly Defined Modules
	<b>Troubleshooting</b> <i>Page 33</i>	Troubleshooting Software wizards Dp analysis
	<b>Data Logging</b> <i>Page 34</i>	Set Parameters for Logging Perform Logging Download logging from Dp Sensor View Loggings in Handheld Display Logging as Graph/List
	<b>Fluid</b> <i>Page 40</i>	Fluid Type Temperature Select Additive Additive Concentration Define Other Fluid
	<b>Hydronic Calculator</b> <i>Page 41</i>	Calculate Flow-Cv-Dp Calculate Power-Flow-DT Calculate Valve setting Select Pipe / Valve Conversion of Units
	<b>Settings</b> <i>Page 44</i>	Instrument Setup Wireless On/Off Language Power Saving
	<b>Information</b> <i>Page 46</i>	Instrument Information Software Version Battery Capacity

## Measuring Preparations

### Prerequisites for Balancing with TA-SCOPE

TA-SCOPE is one of the components in the powerful TA methodology for balancing of hydronic systems.

The ultimate goal of every heating and cooling installation is to provide the desired indoor climate at the lowest possible energy cost. This requires a fully controllable hydronic system. Achieving full hydronic control depends on meeting three key conditions:

- Design flow must be available at all terminals.
- Differential pressure ( $\Delta p$ ) across control valves must not vary too much.
- Flows must be compatible at system interfaces.

The best way to attain these conditions is to perform a balancing procedure using TA-SCOPE. Balancing ensures that the plant actually performs as specified by the designer and operates the way the designer intended.

### Switch on/off the units

The Handheld and Dp Sensor units are switched on and off individually.

The Handheld Information bar displays details on intensity of wireless signal and battery status for the connected units.

#### Handheld

Press  on the keypad during 1 second to switch on/off.

#### Dp Sensor

Press  during 1 second to switch on/off.



### Sleep Mode

Once the screen has dimmed and been set to sleep mode the Handheld unit is still active, touch any key to return directly to the last screen used.

If a unit is switched off whilst in sleep mode and then started again the start position is the main menu and previous actions are interrupted.

If a Dp Sensor is actively performing a logging function, it will automatically go into sleep mode after 15 minutes. The logging process will then continue whilst in sleep mode.

If a Dp Sensor is not actively performing a logging function, the unit will automatically switch off if it does not detect its paired handheld within 30 minutes.

Adjustments of display settings and sleep mode are performed in the **Settings** menu, see page 44.

## Wireless Communication



On delivery TA-SCOPE is prepared for wireless communication. No adjustments of settings or other actions are required.

If required the Handheld and Dp Sensor units can be connected via cable.

Wireless communication uses radio frequency and is therefore not allowed in areas where other vital electronic devices can be disturbed, i.e., near medical equipment and implanted cardiac pacemakers, in health care facilities, aircrafts, blasting areas, areas with potentially explosive atmospheres and other areas posted "turn off two-way radio".

Cut the wireless connection from the **Settings** menu.  is displayed on the Information bar and the wireless icon on the Dp Sensor indicates red .

When reactivating the wireless function the units should initially be connected with the cable to establish radio communication. If wireless communication stops due to the units being out of radio range, they will automatically reconnect when back within radio range as long as the **Wireless Signal** option is set to **On**.

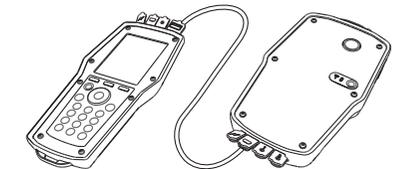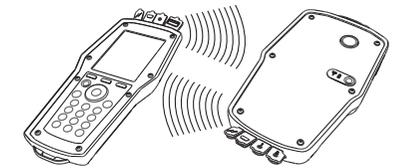

### Connect Alternative Dp Sensor

Any Handheld and Dp Sensor can become a wireless pair. This may be particularly useful in companies with several TA-SCOPE instruments. Establish communication between your Handheld unit and the Dp Sensor you currently wish to work with.

- 1 Connect the units with the cable and check that wireless option in Settings menu is set to On.
- 2 Wait until the wireless icon  is displayed on the Information bar.
- 3 Disconnect the cable and wireless communication is established.




**Tips!** Wireless range Handheld – Dp Sensor  
Range in open space – approximately 70 meters  
Range inside a building – approx. 20-30 meters

**Connect / Disconnect Measuring Equipment**

The measuring equipment is colour coded to ensure valid data is collected, red indicates high pressure and blue indicates low pressure.

**Warning!** Beware of hot fluid in the valve. Always follow the sequence described here when connecting and disconnecting the measuring equipment.

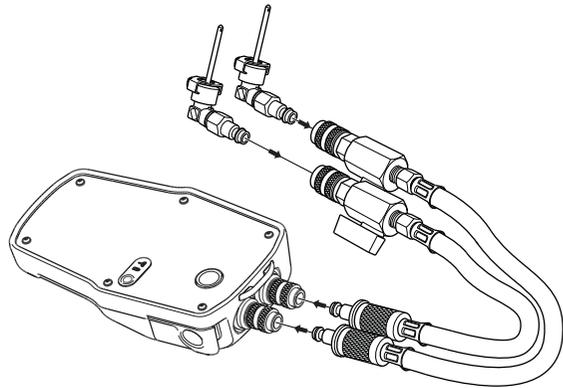


**First** – connect the measuring needles to the measuring hoses which shall be connected to the Dp Sensor, pay attention to the colour indications. Close the shut-off valve in the measuring hose.

**Note!** When measuring, the shut off valve in the measuring hose must be open.

**Second** – connect the measuring needles to the measuring points on the valve, which are also colour coded.


When disconnecting, close the shut-off valve in the measuring hose to avoid fluid leakage.

Press the safety catches at the measuring needles and pull to release.

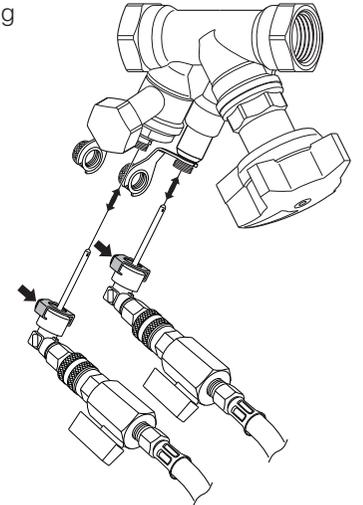

Each hydronic function in TA-SCOPE requires a specific set-up of measuring hoses and temperature sensors.

On screen diagrams will be displayed on the Handheld for guidance.

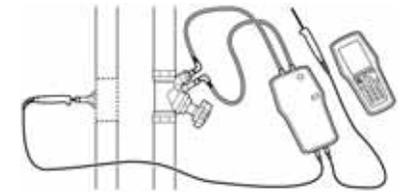


**Calibration of Dp Sensor**

To achieve correct measuring values calibration of the Dp Sensor is always required prior to measurements of flow and differential pressure ( $\Delta p$ ).

Air pockets might be left in the hoses and these are vented through calibration to maintain optimal accuracy.


TA-SCOPE automatically demands calibration when needed. When requested – press the calibration button (1) on the Dp Sensor. Release the calibration button (2) when the message “Calibration is ready” is displayed.

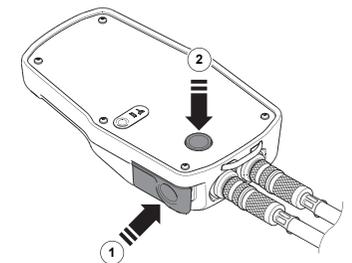

## Handwheel

Each TA balancing valve has a handwheel for determining valve opening. The digital read out displays the number of turns.


Below the valve to the left is completely shut and displays 0.0 and the valve to the right is open by 2.3 turns.

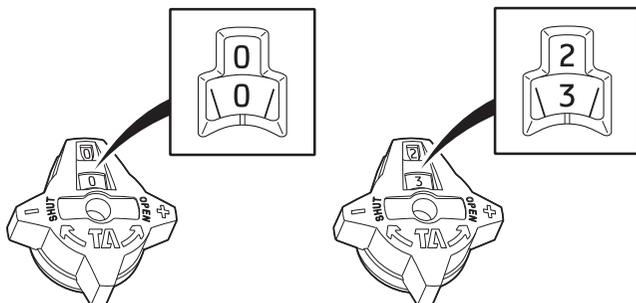

## Connections for Cables


### Handheld connections

- 1 Charger
- 2 USB to PC
- 3 Digital Temperature Sensor
- 4 USB to Dp Sensor

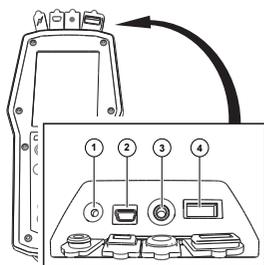

### Dp Sensor Connections

- 1 Charger
- 2 USB to Handheld
- 3 Digital Temperature Sensor 1
- 4 Digital Temperature Sensor 2

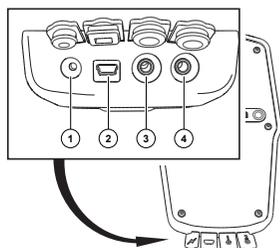

## Hydronic Functions

### Overview of Hydronic Functions

TA-SCOPE enables various alternatives for exploring and diagnosing hydronic systems. On screen diagrams will guide you through the physical set up of the measurement equipment as required for the hydronic function you would like to perform.

The hydronic functions then enable the system data to be used effortlessly in many flexible and useful ways.

The main hydronic functions of TA-SCOPE, where system data can be collected and applied, are as follows:

**Quick Measure** – Straightforward function to measure flow, differential pressure ( $\Delta p$ ), temperature and power. To be used when only one or a few valves are of interest. The function does not require any predefinition of network or module.



**Hydronic Networks** – Complex networks created in TA-Select are easily downloaded to TA-SCOPE. Use a network for measuring and balancing at any time; during commission, for control and inspection. All hydronic functions can be applied to a selected valve from a Hydronic Network.



**Balancing** – The powerful TA balance method for hydronic systems. Measuring all valves in a module and calculating the correct valve openings to attain design flow.



**Troubleshooting** – Software wizards take you step-by-step through the process of locating and diagnosing problems and errors in hydronic systems, e.g., Dp ( $\Delta p$ ) analysis.



**Data Logging** – Measurement during a predetermined period of time to analyse any fluctuations in flow, differential pressure ( $\Delta p$ ), temperature and power. The logged data is stored and listed or displayed as a graph, both in TA-SCOPE and TA-Select.



## Quick Measure

### Explanation of Function




Use Quick Measure for measuring flow, differential pressure ( $\Delta p$ ) and temperature in a waterborne heating/cooling system. The function also provides a measuring method for estimating power.

Quick Measure is the preferred method for separate measurements on a few selected valves. For example when performing control or inspection of a balanced system.

### Measure Flow

- 1 Connect measuring equipment depending on desired measurement. The **Measure Flow** function enables a combined measurement of differential pressure ( $\Delta p$ ), flow and temperature. More connecting details on page 14.
- 2 Navigate  $\Delta v$  to **Quick Measure** in the main menu and press enter.
- 3 Navigate  $\Delta v$  to **Measure Flow** and press enter.
- 4 Optionally input **Design Flow**. Navigate  $\Delta v$  to  and type the given design flow for the terminal. While measuring the deviation is given in percent besides the entered design flow.
- 5 **Define valve**. Navigate  $\Delta v$  to  and press enter.
- 6 Select input field for **Type** and press enter.
- 7 Navigate  $\Delta v$  to desired valve type and press enter.
- 8 Continue by defining **Family** and **Valve** in the same way.

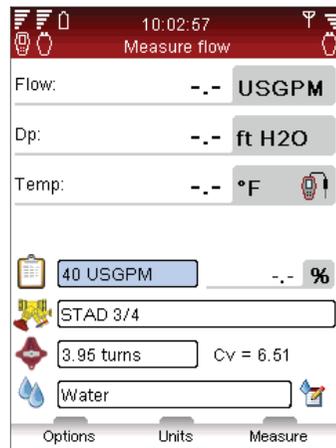


- 9 Make valve settings valid by pressing the function key **Done**. Valve settings are visible in the **Measure Flow** menu. Valve size can easily be changed from here, navigate  $\Delta v$  to  and cycle  $\Delta$   $\triangleright$  the options. Type and family stays the same.
- 10 Input **Valve Opening**. Navigate  $\Delta v$  to  and type the number of turns stated at the digital read-out at the handwheel, more handwheel details on page 16.
- 11 Define fluid in . Press enter and navigate  $\Delta v$  to input fluid temperature and properties. Press enter.
- 12 Freezing point is stated below the temperature input field and the auto correction function indicates if the allowed limits are exceeded. More **Fluid** details on page 40.
- 13 Press function key **Done** to make fluid definition valid.



**Note!** Remember to always update fluid properties according to the system currently being measured.

- 14 Press function key **Measure** to start measuring.
- 15 Press the **Calibration** button (1) at the Dp sensor.
- 16 The calibration is finished when a message on the display tells you to release the calibration button (2).
- 17 Measurement begins and values are displayed for Differential Pressure ( $\Delta p$ ), Flow and optional Temperature if the temperature sensor(s) is connected.

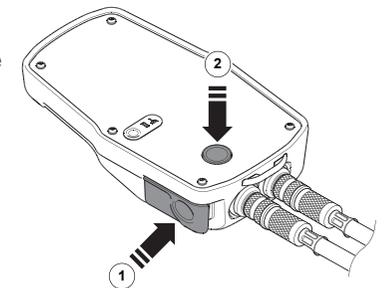

- 18 If multiple temperature sensors are connected, cycle the sensors by navigating  $\Delta v$  to the temperature row and press enter. An icon  indicates which of the sensors is currently showing a temperature reading.



**Tips!** Short cut to increase/decrease valve size and valve turns from the measuring menu – press  $\Delta$   $\triangleright$  when the input field is in focus.

- 19 Press function key **Hold** to pause the measuring, and press **Continue** to resume.
- 20 **Save measurements**
  - Press function key **Save** to store the measured data for future needs.
  - Enter a name for performed measurement. Date and time is automatically added.
  - If the name entered is already used, an overwrite request is displayed.
  - Optionally enter a description.
  - Press function key **Save**, the measurement is saved and measuring menu appears again.
- 21 End measurement by exiting the menu, press ↵ and disconnect the measuring points according to page 14.

### View Saved Measurements

- 1 Select **View Saved Measurements** from the **Quick Measurements** main menu, press enter.
- 2 Measurements are displayed in a list showing reference i.e., the entered name, type of measurement and date/time.
- 3 Press function key **View** to open up details on the measurement in focus.
- 4 Delete measurements one by one using the function key **Delete**.
- 5 Delete all saved measurements from the function key **Options** and navigate ▲▼ to **Delete all quick measurements**, press enter.

### Flow Adjustment – Computer Method

TA-SCOPE enables a method for correcting the flow to attain desired flow for terminals with a given design flow. TA-SCOPE will lead you through the process.

- 1 Whilst measuring on a valve press  or function key **Option** and navigate ▲▼ to **Flow Adjustment (Computer Method)**, press enter.
- 2 Shut the valve and press function key **Done**.
- 3 Measurement will continue and display differential pressure ( $\Delta p$ ) for the closed valve.

- 4 TA-SCOPE automatically calculates a new handwheel position in order to attain design flow.
- 5 Adjust handwheel accordingly and press function key **Recalculate**.
- 6 If needed, perform further calculations and handwheel adjustments to reach the desired flow.
- 7 Finish the adjustment by pressing function key **Quit**.

### Cv-mode for non-TA valves

TA-SCOPE is supplied containing an up-to-date database of TA valves. However measurements on non-TA valves are also possible. Instead of selecting a TA valve the Cv-value can be used.

- 1 Press function key **Options**, navigate ▲▼ to **Switch to Cv-mode**, press enter.
- 2 **Cv** icon is shown instead of  and the valve properties can not be adjusted.
- 3 Once in Cv-mode, quick measurement operations are continued in Cv-mode until you switch back to TA valve mode.



### Change Units

Default units in TA-SCOPE are automatically preset according to your market. However all units can be changed depending on your personal preferences.


- 1 Press function key **Units** to change any of the units.
- 2 Navigate ▲▼ up and down in the list.
- 3 Cycle the alternatives ◀▶ or press enter to display the alternatives and enter to select.
- 4 The function key **Reset** will bring back the default unit for the one in focus.
- 5 Press function key **Reset all** to set the default units for all parameters.
- 6 Return to measuring menu by pressing function key **Quit** or ↵ from the keypad.



**Tips!** Easily change units directly from the measuring menu – navigate ▲▼ to the measurement row e.g., Flow and press ◀▶ repeatedly to cycle available units.

### Measure Differential Pressure ( $\Delta p$ )


- 1 Connect the measuring equipment according to page 14.
- 2 Navigate  $\blacktriangle\blacktriangledown$  to **Quick Measure** in the main menu and press enter.
- 3 Navigate  $\blacktriangle\blacktriangledown$  to **Measure Dp** and press enter.
- 4 Press **Calibration** button at the Dp sensor, page 15.
- 5 The calibration is finished when a message on the display tells you to release the calibration button.
- 6 Measurement begins and the Differential Pressure ( $\Delta p$ ) is displayed.
- 7 It is possible to save measured data, see item 20 in the **Measure flow** section.
- 8 End measurement by exiting the menu, press  $\curvearrowright$  and disconnect the measuring points according to page 14.

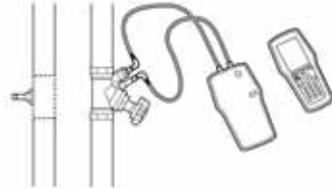


### Measure Temperature



- TA-SCOPE enables three ways to connect the temperature sensors. The Dp Sensor has two connections and Handheld one. The icons to the left indicates for each row on the display which sensor the data comes from.
- 1 Connect the required temperature sensors.
  - 2 Navigate  $\blacktriangle\blacktriangledown$  to Quick Measure in the main menu and press enter.
  - 3 Navigate  $\blacktriangle\blacktriangledown$  to **Measure Temperature** and press enter.
  - 4 The temperature sensor(s) begins to measure directly.

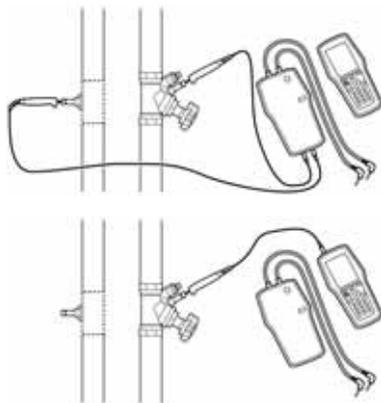

- 5 If two sensors are measuring, the temperature difference – DT ( $\Delta T$ ) is displayed. DT ( $\Delta T$ ) can optionally be set as hidden. Press function key **Options**.
- 6 Possible to save measuring data, see item 20 in the **Measure Flow** section.
- 7 End measurement by exiting the menu, press  $\curvearrowright$  and disconnect the temperature sensors from the test points.

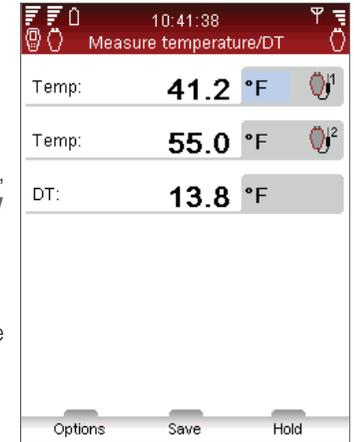

### Measure Power

TA-SCOPE contains a method for measuring power. Depending on the type of circuit, i.e., number of measuring points available, the function is performed in various ways. Follow the detailed instructions on the display.

- 1 Navigate  $\blacktriangle\blacktriangledown$  to **Quick Measure** in the main menu and press enter.
- 2 Navigate  $\blacktriangle\blacktriangledown$  to **Measure Power** and press enter.
- 3 **Define circuit** – state number of measuring points.
- 4 Select measuring equipment required for the circuit type. Connect the measuring needles and sensor(s), see page 14.
- 5 TA-SCOPE automatically checks if the correct set of sensors are connected according to selected circuit type.
- 6 If the circuit has four measuring points follow the instructions below. For circuits with three measuring points an alternative instruction will be displayed.
- 7 Optionally input **Design Flow**. Navigate  $\blacktriangle\blacktriangledown$  to  and type the given design flow for the terminal. While measuring the deviation is given as a percentage besides the entered design flow.
- 8 **Define valve**. Navigate  $\blacktriangle\blacktriangledown$  to  and press enter.
- 9 Select input field for **Type** and press enter.
- 10 Navigate  $\blacktriangle\blacktriangledown$  to desired valve type and press enter.
- 11 Continue by defining **Family** and **Valve** in the same way.





- 12 Make valve settings valid by pressing the function key **Done**. Valve settings are visible in the **Measure Flow** menu. Valve size can easily be changed from here, navigate  $\Delta \nabla$  to  $\text{H}$  and cycle  $\leftarrow \rightarrow$  the options. Type and family stays the same.
- 13 Input **Valve Opening**. Navigate  $\Delta \nabla$  to  $\text{H}$  and type the number of turns stated at the digital read-out at the handwheel, more handwheel details on page 16.
- 14 Define fluid in  $\text{H}$ . Press enter and navigate  $\Delta \nabla$  to input fluid temperature and properties. Press enter.
- 15 Freezing point is stated below the temperature input field and the auto correction function indicates if the allowed limits are exceeded. More **Fluid** details on page 40.
- 16 Press function key **Done** to make fluid definition valid.
- 17 Press function key **Measure** to start measuring.
- 18 Press the **Calibration** button at the Dp sensor, see page 15.
- 19 The calibration is finished when a message on the display tells you to release the calibration button.
- 20 Measurement begins and values are displayed for Power, Flow and Differential Temperature  $\Delta T$ .
- 21 Press function key **Hold** to pause the measuring, and press **Continue** to resume.
- 22 Possible to save measuring data in the same way as Flow, see item 20 in the **Measure flow** section.
- 23 End measurement by exiting the menu, press  $\curvearrowright$  and disconnect the measuring points according to page 14.

## Hydronic Networks

### Explanation of Function



Hydronic systems are easily created and managed in TA-Select and then downloaded to TA-SCOPE, see page 47.




Hydronic Networks is the function where hydronic systems can be explored and used for all TA-SCOPE options: Quick Measure, Balancing, Troubleshooting and Data Logging.

New networks can be created with this function. After taking actual measurements on the hydronic network, these together with the updated network design and layout, can be uploaded to TA-Select.

Both networks designed for manual balancing and balancing with Dp control are manageable in the Hydronic Networks function.

### Navigate Hydronic Networks

- 1 Select **Hydronic Networks** from the main menu.
- 2 Networks stored in Hh memory are displayed in a list. If no network has been created or downloaded **No Hydronic Network** is displayed.
- 3 Additional information is shown for the network in focus at the bottom part of the display.
- 4 Select a network  $\Delta \nabla$  and press enter or press function key **Navigate** to open.
- 5 Explore the network  $\text{H}$ . Press  $\leftarrow \rightarrow$  or enter to expand/collapse the structure of non-terminal circuits  $\text{H}$  and circuit with terminal  $\text{H}$ .

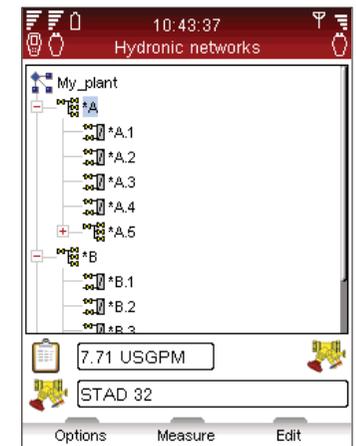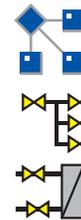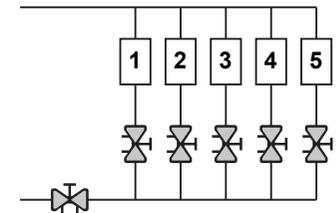



**Tips!** Levels in a Hydronic Network \*A and \*A.1 are non-terminal circuits. Possible to add both terminal and non-terminal circuits to this level \*A.1.1 are terminal circuits. No circuits can be added

- 6 Press function key **Options** to select the measuring type to perform. E.g., **Measure** will start a **Quick Measure** operation, select **Balance** for performing balancing of the network and **Log Data** to use the network for a logging.

### Edit Existing Network

Hydronic Networks can be modified in TA-SCOPE where changes from the original design are discovered while on site.

Depending on which level of the network is in focus, several different options can be performed.

- 1 Navigate **▲▼** to the circuit to be modified.
- 2 Press function key **Options**.
- 3 From here the edit options **Add circuit, Cut, Copy, Paste** and **Delete** are accessible.
- 4 **Add circuit** can only be performed from the top level of the network and from any non-terminal circuit.
- 5 Select **Add circuit** from the Options menu. Define if the new circuit is a terminal or non-terminal circuit.
- 6 TA-SCOPE enables several balancing options for the circuits. Navigate **▲▼** to the **Balancing With** drop down list and press enter. Scroll the list **▲▼** and press enter to select. Contact your local TA sales office for more details on hydronic systems with Dp control.
- 7 Press the function key **Continue**.
- 8 **Define Valve**  for the circuit. Valve type and size from previous input is default, cycle the sizes with **◀ ▶** or press enter to open **Define valve** menu.
- 9 For terminal circuits **Design flow**  can be entered (optional).
- 10 Enter number of circuits to add to duplicate the same circuit several times.
- 11 Press function key **Add**.



### Delete Network

It is possible to delete the entire network from the **Hydronic Network** main menu.

- 1 Navigate **▲▼** to the network to be deleted.
- 2 Press function key **Options**.
- 3 Select **Delete** and press enter.
- 4 Press function key **Yes** and the network disappears from the list.
- 5 To delete individual circuits in a network, navigate **▲▼** to each circuit and delete one by one.
- 6 Open the network and navigate **▲▼** to the circuit.
- 7 Press function key **Options** and select Delete.

### Create a Hydronic Network

Is also possible to create a network directly in the TA-SCOPE if no Hydronic Network has been downloaded from TA-Select.

- 1 Press function key **New** from the **Hydronic Network** main menu.
- 2 Enter network name and optional description. Dot key works as caps lock. For a dot keep the key pressed until a dot appears. Numerical keys works the same, a prolonged press enters a digit.
- 3 If needed, edit the fluid settings. Navigate **▲▼** to  and press enter, more **Fluid** details on page 40.
- 4 Press function key **Create** and the new network appears in the list displayed at **Hydronic Networks** main menu.
- 5 Select **▲▼** the new network and press enter.
- 6 Add content to the network. Press function key **Options** and select **▲▼ Add circuit**, press enter.
- 7 Tick the box for **Circuit with terminal units** by pressing enter if there is a terminal.
- 8 TA-SCOPE enables several balancing options for the circuits. Navigate **▲▼** to the **Balancing With** drop down list and press enter. Scroll the list **▲▼** and press enter to select. Contact your local TA sales office for more details on hydronic systems with Dp controller.





- 9 Press the function key **Continue**.
- 10 **Define Valve**  for the circuit. Valve type and size from previous input is default, cycle the sizes with   or press enter to open **Define valve** menu.
- 11 For terminal circuits **Design flow**  can be entered (optional).
- 12 Enter number of circuits to add.
- 13 Press function key **Add**.

## Balancing

### Explanation of Function



**Balancing** is one of the main functions in TA-SCOPE. It is a systematic method to ensure that the hydronic system actually performs as specified by the designer and provides the desired indoor climate at the lowest possibly energy cost.

The TA Balance method provides a survey of the entire hydronic system and takes you valve by valve, module by module through the plant. Easy-to-follow step-by-step instructions are displayed on TA-SCOPE.

Balancing can be performed both in Hydronic Networks created and downloaded from TA-Select and also on modules defined on site with your TA-SCOPE.

### Prerequisites for Balancing

There are several important system requirements which should be ensured before starting the balancing process.

- Variable speed pump is at full speed (set-point will be optimised after balancing).
- Control valves are fully open.
- Partner valve is fully open.
- Balancing valves of the module are all set at half-opening or at calculated presetting opening.
- The right media/fluid temperature in cooling system.

### Balance a Hydronic Network with TA Balance

The TA Balance method provides automatic calculation of valve handwheel settings for the entire hydronic system to ensure design flow is available at all terminal units.


When balancing a predefined hydronic network the action can be started either from the **Balancing** function, as described below, or directly from the function **Hydronic Networks**, see page 25. The method and required actions are then the same.

- 1 Select  **Balancing** from the main menu, press enter.
- 2 If required, adjust the acceptable flow deviations in design conditions with **Balancing Tolerance** (also available in **Settings** menu, see page 44).




- 3 Select **TA Balance method**. Press enter.
- 4 Ensure the essential balancing prerequisites displayed in the list are fulfilled, press function key **Continue**.
- 5 A drop-down list of networks stored in your TA-SCOPE is displayed. Navigate **▲▼** to desired network and press enter. If no Hydronic Network is stored the only available option is **New Hydronic Network**.
- 6 Select **An existing module**, press enter.
- 7 The selected network appears on the display. Expand **◀▶** the network and navigate **▲▼** to the module where the balancing should start from.

- 8 Connect the measuring equipment to the first valve you wish to measure on, see page 14 for connection details.
- 9 Enter the number of the current valve to measure on. The number must correspond to actual valve number in the system design.

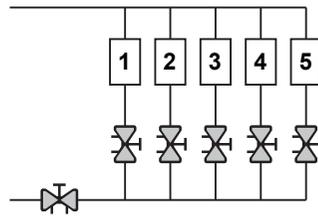

**Tips!** In the TA-Balance method valves can be measured in any order but numbering must follow the correct order starting at 1 at the entry of the module and incrementing by 1 for each next valve as we progress towards the end of the module.

- 10 System properties including design flow, valve type and valve opening for the selected valve are displayed.
- 11 Press the function key **Measure**.
- 12 Press **Calibration (1)** button on the Dp Sensor.
- 13 The calibration is finished when a message on the display tells you to release the calibration button (2).
- 14 Measurement begins and values for the connected valve are displayed.
- 15 Press function key **Continue**.
- 16 Shut the valve and then press the function key **Done**.

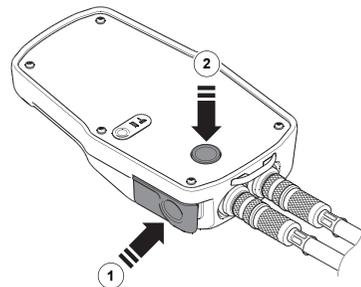

- 17 Values for the closed valve are displayed. Press function key **Continue**.
- 18 Re-open the valve to the previous setting as displayed and press function key **Continue**.
- 19 A list of options appears on the display dependent on the current stage of the balancing process.
- 20 Select **Measure Next Valve** and repeat the process from item 8 above.
- 21 Continue to measure all valves in the module until they are all marked with a green tick. Follow the sequence as above and instructions on the display. To check current status of the valves in the module press **View measured data** from the **Options** menu.
- 22 When all valves in the chosen module are measured select **Calculate** from the **Options** menu.
- 23 Calculated setting for each valve in the module are shown in a list, adjust the valves accordingly.
- 24 Repeat the balancing process as above (item 6-23) for each module in the Hydronic Network.
- 25 To verify the completeness of the balancing process a control measurement of each valve should be performed.
- 26 The collected data from the control measurement can be uploaded to TA Select and used for a Balancing report.

### Modify or Define New Module

Whilst on site and performing balancing on a hydronic system changes from the original design might be discovered. The function **A newly defined module** enables you to add modules to a hydronic network in TA-SCOPE.

- 1 Select **▲▼ Balancing** from the main menu, press enter.
- 2 If required, adjust the acceptable flow deviations in design conditions with the option **Balancing Tolerance** (also available in **Settings** menu, see page 44).



**Tips!** If the Dp Sensor  indicates low battery capacity during measuring or balancing, connect it to Handheld with the USB cable for additional power supply. For charging details, see page 48.

- 3 Select **TA Balance method**. Press enter.
- 4 Navigate **▲▼** to **A newly defined module**, press enter.
- 5 Enter number of circuits to add to the module.
- 6 Untick the box **Partner valve available** if no partner valve is included in the module.
- 7 If required adjust the option **Minimum Dp in the index valve**, which is set by default to the market standard value.
- 8 Press function key **Continue**.
- 9 Define system properties including design flow, valve type and valve opening for the valves in the new module. Press function key **Continue**.
- 10 A list of existing hydronic networks is displayed and the newly defined module can be inserted into one of these. Navigate **▲▼** the desired network and press enter.
- 11 The network will appear as an expandable structure. Press **◀▶** or enter to expand/collapse the network. Navigate **▲▼** to the correct level for the new module, press enter to insert.
- 12 Enter a module name of your own preference or use the automatic name function by ticking the box **automatic**, press enter when the box is in focus.
- 13 Alternatively a separate network for the new module can be created. Instead of selecting an existing network, enter a network name which has not been used previously. Also name the module, either enter a name or use the automatic function.
- 14 Press function key **Continue** to start balancing the valves in the new module.
- 15 Continue the balancing process as described in “Balance a Hydronic Network with TA Balance”, item 7-26.

## Troubleshooting

### Explanation of Function



Software wizards take you step-by-step through the process of locating and diagnosing problems and errors in hydronic systems, e.g., Dp analysis.

## Data Logging

### Explanation of Function




Data Logging is used to study fluctuations of system performance over a predetermined period of time. Flow, differential pressure ( $\Delta p$ ), temperature and power can be logged.

Connect the Dp Sensor to the valve and then perform preparations to collect system data. During the predefined time period the Dp Sensor can be left at the site to log measurements. When the measuring period is finished the stored data is available for downloading to the Handheld.

A logging can be performed both from a valve defined in a Hydronic Network or a separate valve free of choice.

### Start a New Logging


- 1 Connect measuring equipment according to the logging to be performed. For e.g., **Flow and temperature logging** the Dp Sensor and one temperature sensor is required. Connection details on page 14.

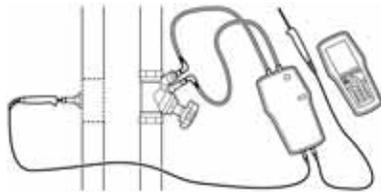

- 2 Navigate **▲▼** to **Data Logging** in the main menu, press enter.
- 3 Select **Start New Logging**, press enter.

- 4 Navigate **▲▼** to the type of measuring to be performed e.g., **Flow and temp logging**, press enter.


- 5 Available sensors, their status and connections are displayed in a list. Additional details and guidance are displayed below the list. Items not used in the logging are grey and can not be selected.

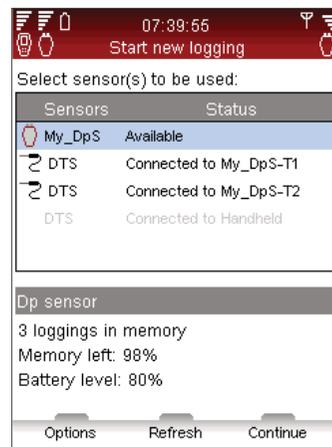

- 6 Navigate **▲▼** to required sensors and press enter to select. Repeat until all required sensors are selected.




- 7 Selected state is indicated by an icon,  or  in front of the sensors name in the list.
- 8 Press function key **Continue** to move on to valve settings.
- 9 When logging flow, differential pressure ( $\Delta p$ ) or power, calibration is required.
- 10 Press the **Calibration** button (1) on the Dp sensor.
- 11 The calibration is finished when a message at the display tells you to release the calibration button (2).
- 12 Enter valve and fluid preferences for the valve to be logged.
- 13 If the logging is started from Hydronic Network function, see page 25, the network row is active and the circuit name displayed.
- 14 If the valve is not linked to a hydronic network the network row will state **Undefined**.

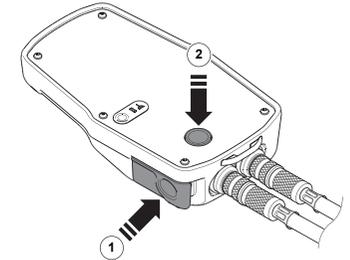

### Logging Options

Type	Abbreviation	Required sensors
Flow logging	q	DpS
Dp logging	Dp ( $\Delta p$ )	DpS
Temperature logging	T	1 DTS <i>connected to DpS</i>
DT logging	DT ( $\Delta T$ )	2 DTS <i>connected to DpS</i>
Power logging	P	DpS & 2 DTS
Flow and temp. logging	q, T	DpS & 1 DTS
Dp and temp. logging	Dp ( $\Delta p$ ), T	DpS & 1 DTS

- 15 For non-TA valves press the function key **Option**, select **Switch to Cv-mode** and press enter. Enter information regarding the valve.
- 16 Press the function key **Continue** for further settings of the logging.
- 17 **Reference name** is by default "Log" followed by a figure which increments by the number of loggings stored. Optional; enter a reference name of your own preference.
- 18 Set **Start Date** and **Start Time** for the logging.
- 19 Set **Time Step**, in seconds, to be measured. The interval is selectable within 3 to 240 seconds.
- 20 Define **Length** of the logging which is limited by remaining memory and battery capacity of the Dp Sensor displayed on the screen.
- 21 Release memory by erasing old loggings. Press the function key **Options** and select **List loggings in memory**, press enter.
- 22 A list of loggings and the occupied memory is displayed. Press the function key **Delete** to remove the one in focus or **Delete all** for clearing the whole memory.
- 23 Press function key **Done** to return to the logging preferences.
- 24 Edit any of the parameters by pressing function key **Options** to select or navigate **▲▼** to the item, press enter and adjust the settings with **▲▼**. Press enter.
- 25 Press function key **Save** and logging will be executed accordingly to settings.
- 26 Leave Dp Sensor switched on at the valve for logging. It will automatically go into sleep mode between the measurements to minimize battery consumption.
- 27 Pick up the Dp Sensor when logging is completed.

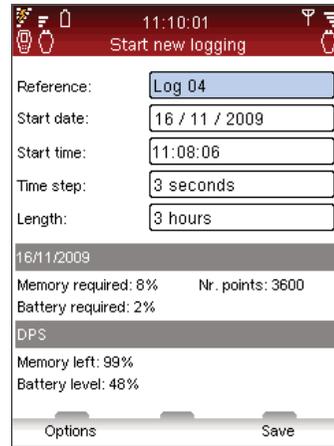

## Download Loggings

When a logging is finalised the data is ready to be downloaded from Dp Sensor to Handheld for viewing and upload to PC for further analysis.

- 1 Make sure the communication, wireless or by cable, between Handheld and Dp Sensor is established.
- 2 Select **Download logging from Dp sensor** from the **Data Logging** main menu.
- 3 The status of Dp Sensor is displayed and can be;
  - **Available** – logging finished and ready to download
  - **Logging in progress** – logging is being performed
  - **Logging programmed** – Dp Sensor prepared to perform logging
- 4 Press function key **View** to display the loggings stored in Dp Sensor.
- 5 Navigate **▲▼** to the logging you wish to download.
- 6 Press function key **Download** to start. During download you can select the option to delete after completion of the download process.

## View Loggings

Logged data is stored and reached with the function **View Loggings in handheld**. Possible to view data as graph or listed in several ways. Select **Data Logging** from the main menu, press enter.

- 1 Navigate **▲▼** to **View Loggings in handheld**, press enter.
- 2 Navigate **▲▼** to preferred logging, press the function key **View**.
- 3 A summary of the logging is displayed.
- 4 Press function key **Options** and select **▲▼** display alternative for the data.
  - **View logging data** – measuring points listed displayed with time and values for each one.



**Tips!** It is possible to download the data of a logging while this logging is in progress.

- Navigation keys  $\blacktriangle\blacktriangledown$  scrolls the list page by page showing six items at the time. Press the function key **Options** for alternatives on moving to the very end or beginning of the list and also to change units for measured data.
  - **View logging graph** – measured data displayed as a graph.
  - Zoom in/out with the navigation keys  $\blacktriangle\blacktriangledown$ . Scroll right/left with the navigation keys  $\blacktriangleleft\blacktriangleright$ . Press function key **Tracking** to view logged data step by step. A vertical black line indicates the measuring point and data is displayed below the graph. Move the tracking line with  $\blacktriangleleft\blacktriangleright$ . Press function key **No tracking** to end.
  - **View logging statistics** – overview of the maximum and minimum measuring points for each type of data during the logged period.
- 5 Press function key **Units** to change any of the measuring units.

## Support Functions

### Overview of Support Functions

TA-SCOPE has besides the hydronic functions also several functions to support these.

**Fluid** – Settings of fluid in the system to be explored and diagnosed. Water is the most common fluid in hydronic systems but water with various additives can also be handled by TA-SCOPE.



**Hydronic Calculator** – Perform calculations based on the relationship between flow, differential pressure ( $\Delta p$ ), Cv-value, power and differential temperature ( $\Delta T$ ). The function also gives guidance in selecting pipes and valves when designing hydronic systems and enables unit conversions.



**Settings** – Manage adjustments regarding the instrument and appearance of information from the Settings function.



**Information** – Displays information like software version, last calibration and battery details on Handheld, Dp Sensor and also Temperature Sensor when connected.



## Fluid

### Explanation of Function



This function controls settings of fluid in the system to be measured and balanced. It is also possible to perform any adjustments of fluid from the measuring menus when entering definitions, look for the  icon.

Regardless of which menu the fluid settings are performed from, they will have impact on all present activities in TA-SCOPE at that moment.

Water is the most common fluid in hydronic systems but water with various additives can also be handled by TA-SCOPE. Automatic viscosity correction is performed for all TA valves.

### Change Fluid



- 1 Select  from the main menu, press enter.
- 2 Navigate  to the second input field and expand by pressing enter.
- 3 Select  desired type of fluid by pressing enter. The most common types; glycol, brine and alcohol are selectable from the drop down list.
- 4 For the option **Any Other Fluid** the density, viscosity and specific heat are to be set. Press function key **Properties** and define the fluid.
- 5 For the fluids; Glycol, Brine and Alcohol also set the additive and the concentration as a percentage.
- 6 The top-most input field is for fluid **Temperature**. Freezing point is stated.
- 7 When finished press function key **Done**.



**Tips!** The auto-correction function prevents entering a too high or too low value for temperature and additive concentration.

## Hydronic Calculator

### Explanation of Function



Hydronic Calculator easily performs calculations based on the relationship between flow, differential pressure ( $\Delta p$ ), Cv-value, power and differential temperature ( $\Delta T$ ).

This function also gives guidance in selecting pipes and valves when designing hydronic systems and enables unit conversions.

Hydronic Calculator in TA-SCOPE provides calculations like with hydronic formulas or with the Calculation disc (Balancing Nomogram/Grey disc).



Calculate Flow-Cv-Dp ( $\Delta p$ )



Calculate Power-Flow-DT ( $\Delta T$ )



Calculate Flow-Valve Setting-Dp ( $\Delta p$ )

### Calculate Flow/Cv/Dp ( $\Delta p$ )/Power/DT ( $\Delta T$ )

- 1 Select  **Hydronic Calculator** from the main menu, press enter.
- 2 Select  calculation option:  
Calculate Flow-Cv-Dp ( $\Delta p$ )  
Calculate Power-Flow-DT ( $\Delta T$ )
- 3 Chose variable to be calculated from the **Calculate** drop down list, press enter to display or cycle the list with .
- 4 Enter values for the two other variables.
- 5 Result is automatically displayed.
- 6 Switch to calculate another variable, press function key  or  or .
- 7 Return to Hydronic Calculator main menu by pressing function key **Quit**.

**Calculate Valve Opening**

- 1 Select  **Calculate valve setting (grey disk)** press enter.
- 2 Select **Setting** from the Calculate drop down list.
- 3 Enter values for flow and differential pressure ( $\Delta p$ ).
- 4 Select valve size from the drop down list, press enter.
- 5 Define valve type from the drop down list, press enter.
- 6 Result is automatically displayed.
- 7 Switch to calculate another variable, press function key  or   or  .
- 8 Return to **Hydronic Calculator** main menu by pressing function key **Quit**.

**Recommend Pipe Dimension**

- 1 Navigate  to **Select Pipe**, press enter.
- 2 Enter **Flow**.
- 3 **Select type of pipe**, cycle the options with  or press enter to open drop down list.
- 4 List of calculated pipes is automatically displayed.
- 5 The best pipe dimension is indicated by a green arrow.
- 6 Scroll the list with .
- 7 Linear pressure drop and velocity is displayed for each pipe.
- 8 Switch to **Select Valve**, press function key .
- 9 Return to **Hydronic Calculator** main menu by pressing function key **Quit**.

**Recommend Valve Dimension**

- 1 Navigate  to **Select Valve**, press enter.
- 2 Enter **Flow**.
- 3 **Select valve type**, cycle the options with  or press enter to open drop down list.
- 4 List of calculated valves is automatically displayed.
- 5 The best valve dimension is indicated by a green arrow.

- 6 Scroll the list with .
- 7 List also displays two alternatives for Differential pressure ( $\Delta p$ ) at various valve openings depending on valve type.
- 8 Switch to **Select Pipe**, press function key .
- 9 Return to **Hydronic Calculator** main menu by pressing function key **Quit**.

**Unit Conversion**

- 1 Navigate  to **Unit Conversion**, press enter.
- 2 Select variable for conversion, cycle the options with  or press enter to open drop down list.
- 3 Set the units according to desired conversion.
- 4 When entering a value in one of the value fields the converted value is shown in the other.
- 5 Return to **Hydronic Calculator** main menu by pressing function key **Quit**.

## Settings

### Explanation of Function



In the **Settings** menu, customised adjustments of the instrument and information representation are managed.

### Wireless signal


Turn the wireless signal **On/Off**. When switching the wireless signal back to **On** the units must initially be connected by cable to establish contact. Once  is visible on the Information bar, disconnect the cable to commence wireless communication.

### Technical Parameters

In addition to the default settings, it is possible to show a wider range of TA valves e.g., valves no longer in production. Advanced technical parameters for valves and pipes can also be customised.

### Units

Displayed units are automatically set correctly for your market prior to delivery but can also be customised in this menu. It is also possible to alter the viewed units directly in the measuring menus during operation. Updated units will be maintained across the TA-SCOPE functionality. Reset All in the Units menu will bring back the market specific, standard settings

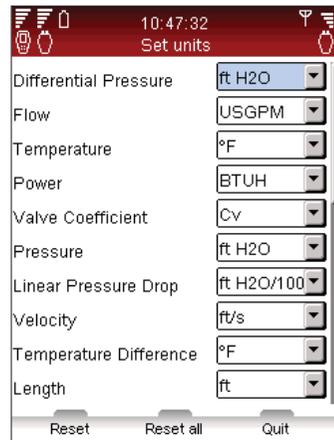

### Power Saving

Adjust the display backlight intensity and time limits for screen dimming, sleep mode and switch off.

### Device Names

Every Handheld and Dp Sensor can be given a customised name. This may be particularly useful in companies with several TA-SCOPE instruments. Any Handheld and Dp Sensor can become a wireless pair. Establish communication between any two units by following the process of connecting an alternative Dp Sensor (see page 13).

### Language & Formats

Select language for display text, set format for date, time and decimal appearance.

### Key Beep

Set the key beep volume between two different levels or off.

### Date & Time

Set the date and time. Time is displayed on the Information bar of Handheld unit.

### Information Messages

Enable/Disable the display of information messages. It can be done message by message.

### Reset to Factory Settings

Reset all parameters to factory-set values. All measured and logged data are also erased.


## Information

### Explanation of Function



The **Information** menu displays basic system details of the Handheld, and all available sensors including;

- Available battery capacity
- Current software version and date of last update.
- Database area and version for TA valves and other TA information.
- Last calibration of Dp Sensor and Temperature Sensor(s). If displayed in red the calibration is older than one year and a new calibration is required.
- Pressure offset voltage

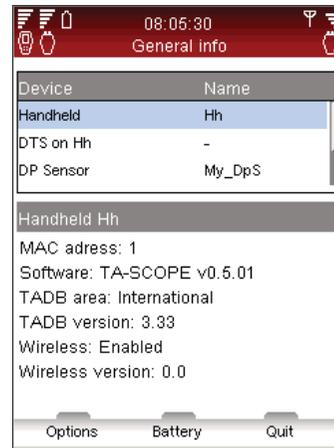


**Tips!** The Information details will be helpful when contacting TA with queries regarding your TA-SCOPE instrument.

## PC Communication

### Transfer of Data


Connect TA-SCOPE to your PC to transfer data, e.g., hydronic networks and collected system information to and from the TA-Select software.

Use the USB-cable to connect the Handheld to a PC and the TA-Select software will automatically connect to TA-SCOPE. Simply follow the instructions on the PC.

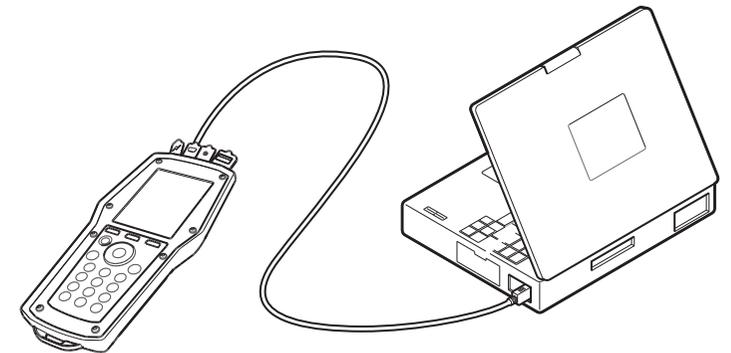

### Software Upgrade

When a new version of the TA-SCOPE software is available, TA-Select will automatically suggest an upgrade. Simply connect your TA-SCOPE as shown and follow the instructions on the PC.

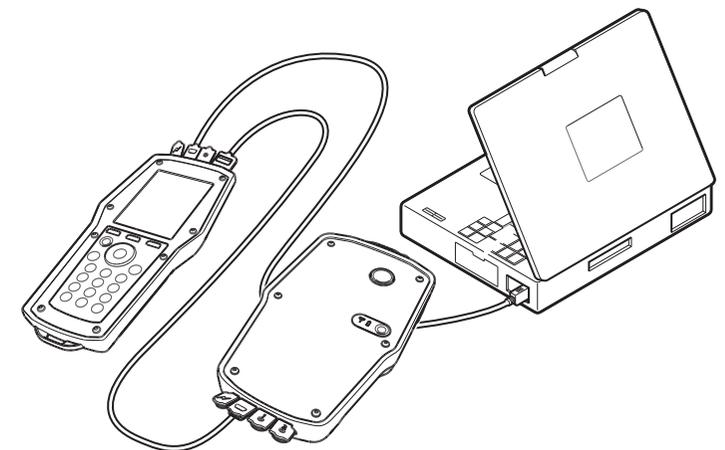


## Instrument Care and Service

### Care & Storage Recommendations

- TA-SCOPE can be cleansed with a dampened cloth and a lenient cleaning-agent.
- Never leave water in the Dp Sensor when risk of freezing exists (i.e., in a car during winter)!
- Do not expose to extreme temperatures, the battery may explode if disposed of in fire.
- Storage above 140° F (60° C) reduces battery life.



**Warning!** Do not open the instrument. This can damage the instrument and void your guarantee! See page 51 for further information.

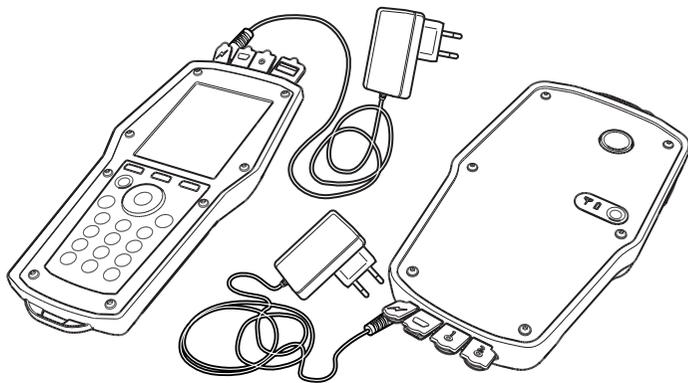

### Batteries – Capacity & Charging

Upon delivery the TA-SCOPE is fully charged and prepared to start balancing immediately. The Information bar on the Handheld displays the battery status for both Handheld and Dp Sensor whenever communication is established.

The Handheld and Dp Sensor are charged separately and TA-SCOPE is delivered with two chargers accordingly.



**Note!** Both Handheld and Dp Sensor contain batteries which require charging. The supplied chargers from TA must be used!



**Tips!** Maximise battery capacity by adjusting the settings for backlight, time to sleep mode and time to switch-off. **Power Saving** options are reached from the **Settings** menu.

The batteries installed in the TA-SCOPE are specifically designed for this application and may not be changed under any circumstances. Contact your local TA sales office if you experience any battery issues.

The time for charging from empty batteries is approximately six to seven hours and gives up to three full working days of wireless performance.

If the Dp Sensor is low on power it can be connected to the Handheld for additional power supply and continued measuring/balancing.

This process will not charge the Dp Sensor, so when you have finished working, you should remember to charge the battery as soon as possible.

The Handheld will also charge connected to the PC during transfer of measuring data and software updates, see page 47.

### Dp Sensor Battery Indicator




The Dp Sensor has a battery indicator  showing fixed or flashing green, orange or red light depending on battery status and remaining capacity.

Red light	Less than 30% battery capacity remaining
Orange light	Less than 70% battery capacity remaining
Green light	More than 70% battery capacity remaining
Fixed light	Charging completed
Flashing light 1 sec.	Charging in progress
Flashing light 3 sec.	On battery or Dp Sensor connected to Handheld for additional power supply
Flashing light 9 sec.	Dp Sensor in sleep mode whilst logging is in progress. Press  during 1 second to reactivate the Dp Sensor.

### Filter Cleaning

Filters in the measuring hoses protect the Dp Sensor from dirt and particles in the fluid running in the hydronic system.

Wear of the filter depends on usage, change when required to maintain optimum accuracy. A set of spare filters is delivered with the TA-SCOPE and can also be ordered as an accessory.

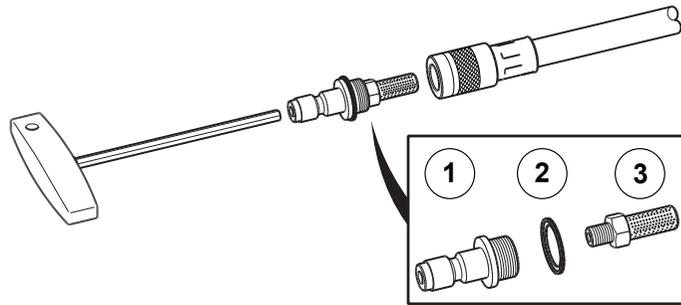

Clean the filter frequently, preferably after each session.

Use the Allen key, 3 mm, provided in the TA-SCOPE case, to remove the filter holder (1), washer (2) and filter (3). Release and wash the filter.

### Calibration Certificates

Calibration certificates for the TA-SCOPE Dp Sensor and Digital Temperature Sensor are issued after the delivery control. The equipment used is traceable to national standards according to ISO 9001 or equivalent.

The frequency of calibration depends upon instrument usage and requirements according to corporate standards. TA recommends regular calibration of the Dp sensor and Digital Temperature Sensor on an annual basis to ensure optimum performance.

### Guarantee

TA-SCOPE is guaranteed to be free of material or performance defects in normal use and service. The guarantee period is two years, starting from and including the day of delivery. A guarantee period of 365 days applies for repairs and service.

This guarantee applies only for the original purchaser and does not include consumable materials or measuring instruments which, in Tour & Andersson AB's opinion, have been used incorrectly, have been neglected or have been damaged as a result of accident or abnormal use or handling. TA guarantees that its software operates in all significant respects in accordance with its performance specification. TA does not guarantee that its software is fault free or that it will operate without crashing.

TA's obligations in respect of its guarantee are restricted to full replacement of the purchase cost or cost-free repair or replacement of defective products delivered to a TA authorised service centre during the guarantee period, at TA's discretion. To claim service under guarantee, either contact the nearest TA authorised service centre or send the product, carriage-paid (FOB) and insured, to the nearest TA authorised service centre with a description of the problem. TA does not accept the risk of damage to the product during transport. After repair under guarantee, the product will be returned carriage-paid (FOB) to the purchaser.

If TA is of the opinion that the fault has been caused by incorrect use, modifications, accident or abnormal use or handling, we will submit an estimate for the cost of repairs and await approval of this estimate before starting work. After repair, the product will be returned carriage-paid to the customer, after which the customer will be invoiced for the cost of repair and of returning the product (FOB).

### FCC Notification and ETL Markings

TA-SCOPE complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**!** **Note!** Changes or modifications of the equipment, not expressly approved by the party responsible for compliance, could void the users authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protections against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorientate or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**ETL LISTED:**

Conforms to UL Std 61010-1  
 Certified to CSA Std C22.2 No 61010.1



### Technical Specifications

**Measurement range**

Total pressure ..... max 362 psi  
 Differential pressure  
 – TA-SCOPE ..... 0 - 29 psi  
 – TA-SCOPE HP ..... 0 - 145 psi  
 Recommended pressure range during flow measurements  
 – TA-SCOPE ..... 0.5 - 29 psi  
 – TA-SCOPE HP ..... 0.5 - 145 psi  
 Temperature liquid medium measurement ..... -4 - 248°F

**Measurement deviation**

Differential pressure  
 – TA-SCOPE ..... 0.015 psi or 1% of reading, whichever is the highest  
 – TA-SCOPE HP ..... 0.029 psi or 1% of reading, whichever is the highest  
 Flow ..... as for differential pressure + valve deviation  
 Temperature ..... <0.36°F

**Battery capacity, operating and charge times**

Handheld unit battery, capacity ..... 4 400 mAh  
 – operating time (with backlight on) ..... >25 h  
 – charge time to full capacity ..... 6-7 h  
 Dp sensor unit battery, capacity ..... 1 100 mAh  
 – operating time (continuous measurements) ..... >25 h  
 – charge time to full capacity ..... 1.5 h  
 Logging time (in sleep mode) ..... >100 days

**Ambient temperature**

During operation ..... 32 - 104°F  
 During charging ..... 32 - 104°F  
 During storage\*) ..... -4 - 150°F  
 \*) Do not leave water in the sensor when there is a risk of freezing.

**Humidity**

Ambient humidity ..... max. 90%RH

**Sealing**

Handheld unit (in wireless mode) ..... IP 64  
 Dp sensor unit (in wireless mode) ..... IP 64  
 Digital temperature sensor ..... IP 65

**Technical Specifications**

**Dimensions/Weight**

Handheld unit ..... 7.8x4.2x1.7 in, 0.8 lb  
 Dp sensor unit ..... 8x3.8x1.2 in, 1.6 lb

**Display**

Size ..... 3.5"  
 Number of dots ..... 320x240  
 LCD type ..... TFT  
 Colour ..... 262K (24BIT)  
 Back light ..... LED WHITE

**Data storage**

Storage of measured data ..... > 2 000 valves  
 Logging of data (3 channels) ..... 3 x 40 000 measuring values

**Wireless**

Range in open space ..... approx. 230 ft  
 Range indoors ..... approx. 65-100 ft

**Charger**

Voltage ..... 5.2 V  
 Frequency ..... 50 Hz  
 Output current ..... 1 200 mA

**Accessories**

**Measuring Hoses**

9.8 ft extension, red 52 199-997  
 9.8 ft extension, blue 52 199-998

15 in, red 52 199-995  
 15 in, blue 52 199-996

6 in with twin needle 52 199-999



**Chucks**

Chuck, red for old valves 52 198-802  
 Chuck, blue for old valves 52 198-803



**Measuring Nipples**

Connection thread 1/2" 52 197-303  
 Connection thread 3/4" 52 197-304



**Measuring Points**

STAF-SG, DN 20-50  
 1.5 in 1/4" 52 179-009  
 4 in 1/4" 52 179-609

STAF/-SG, DN 65-400  
 1.5 in 3/8" 52 179-008  
 4 in 3/8" 52 179-608




**Spanners**

Spanner for measuring points, older valves 52 187-004

Allen key 3 mm, balancing 52 187-103

Allen key 5 mm, draining 52 187-105

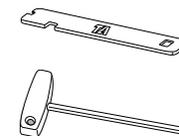

## Accessories

### Dp sensor unit (DpS)

0-29 psi (standard)

EU 52 199-931\*

US 52 199-933\*

AU/NZ 52 199-935\*

UK 52 199-937\*

0-145 psi (HP, high pressure)

EU 52 199-932\*

US 52 199-934\*

AU/NZ 52 199-936\*

UK 52 199-938\*

\*) Market related charger



### Digital Temperature Sensor (DTS)

52 199-941



### Extension cable for Digital Temperature Sensor

Length 5 m

52 199-994




### Belt, with instrument pockets

Size M/L 52 199-991

Size L/XL 52 199-992

Extra pocket for accessories 52 199-993

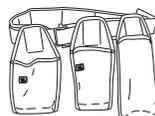

### Spare Filter

To measuring hoses

309 206-01





310 297-14  
US  
2010.11

*we knowhow*

**TA**

---

Tour & Andersson  
[www.tourandersson.com](http://www.tourandersson.com)