


TA-Slider 160 KNX

Protocol Implementation

v1.1
v1.2

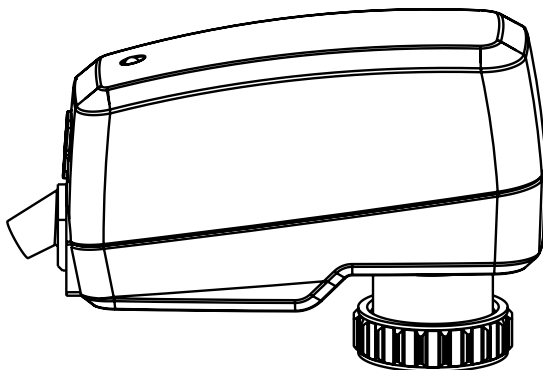

Identification in KNX ETS software

Product family: HVAC
 Product type: Valve
 Manufacturer: IMI Hydronic Engineering
 Name: TA-Slider 160 KNX
 Order number: 322224-0100X


Note: TA-Slider 160 KNX is ETS5 ready. The minimum ETS version is ETS5.0

Commissioning

The proportional electro-motor, TA-Slider 160 KNX, actuator is connected directly to the KNX bus; a separate bus coupler is not required.


The bus connection is carried out via the connecting cable which is fixed to the device with the help of a bus connecting terminal (not provided). An external auxiliary voltage is not necessary. It should be noted that a TA-Slider 160 KNX draws in stand-by less than 10 mA and as much as 25 mA when running in maximum load conditions.

The programming of the physical address can be carried out without contact by placing a magnet as shown in below picture.

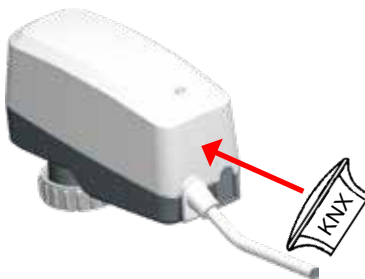

Wiring diagrams

TA-Slider 160 KNX

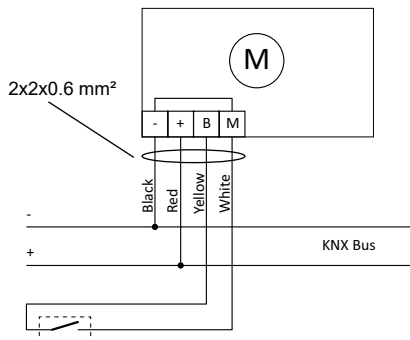

Terminal	Description
M	Neutral
B	Connection for potential free contact (e.g. open window detection), max. 100 Ω, max. 10 m cable or shielded

Note: M terminal is internally connected to KNX “-” Bus wire.

KNX product catalogue

The KNX product catalogue file can be downloaded from our website under the “Documentation” section of TA-Slider 160. Refer to below table to find out which product catalogue version for which actuator firmware version.

Firmware version	Required KNX product catalogue	Compatibility code on sticker	Production date
0.1.4	TA-Slider_160_KNX_v1_1.knxprod	-	
0.2.0	TA-Slider_160_KNX_v1_2.knxprod	- or 260	From 2017-09-15 to 2019-11-14

The objects and parameters described in this document are those corresponding to firmware below 0.2.X (KNX product catalogue 1.1 or 1.2).

For later version, refer yourself to a more recent document.

Unless indicated otherwise, all objects and parameters described in this document are present from the first version of the TA-Slider 160 KNX actuator (firmware 0.1.4, KNX product catalogue 1.1).

KNX protocol implementation

Available communication objects

Obj	Object name	Object function	Type	Flags
1a	Control value	Drive to position	1 Bit	CW
2a	Actual value	Indicate actual position	2 Bytes	CRT
1b	Control value	Drive to position	1 Byte	CW
2b	Actual value	Indicate actual position	1 Byte	CRT
1c	Control value	Drive to position	2 Bytes	CW
2c	Actual value	Indicate actual position	2 Bytes	CRT
3	Detected stroke	Valve stroke detected by calibration	2 Bytes	CRT
4*	Change-over	Change-over flag	1 Bit	CW
5*	Drive to forced position	Go to pre-defined forced position	1 Bit	CW
6*	Binary input	Binary input value	1 Bit	CRT
7	Error code	Error code	2 Bytes	CRT

For communication objects 1 and 2 (Control value and Actual value), version a, b or c are mutually exclusive.

Communication objects marked with a * are available depending on configuration.

Error code is a bit field formatted as follows

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
r	r	r	r	r	r	r	r	r	r	r	SOOR	CT	SDF	Clogging	PF

r: Reserved
 SOOR: Signal out of range alarm
 CT: Cyclic timeout alarm
 SDF: Stroke detection failure
 Clogging: Clogging alarm
 PF: Power failure

Examples

“4” is “100” in binary representation. According to the table:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
r	r	r	r	r	r	r	r	r	r	r	SOOR	CT	SDF	Clogging	PF
0	0	0	0	0	0	0	0	0	0	0	0	0	1	0	0

This “4” error means “SDF”

“6” is “110” in binary representation. According to the table:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
r	r	r	r	r	r	r	r	r	r	r	SOOR	CT	SDF	Clogging	PF
0	0	0	0	0	0	0	0	0	0	0	0	0	1	1	0

This “6” error means “SDF” and “clogging”

Parameters – Main

Control type

Always available

Options:

a) Two points (1 bit telegram)	b) Proportional - Rough positioning (8 bit telegram)	c) Proportional - Fine positioning (10000 values)
-----------------------------------	---	--

Default value: Proportional - Rough positioning (8 bit telegram)

Set the type of the control object.

Target position for control value 0

Available when Control type is a)

Parameter type: Integer

Range: Min: 0, Max: 10000

Default value: 0

Unit: per 10000

Setpoint when a 0 is sent (control value is binary).

Target position for control value 1

Available when Control type is a)

Parameter type: Integer

Range: Min: 0, Max: 10000

Default value: 10000

Unit: per 10000

Setpoint when a 1 is sent (control value is binary).

Characteristic

Available when Control type is b) or c)

Options:

Linear	Equal Percentage Modified (EQM)	Inverted EQM
--------	---------------------------------	--------------

Default value: Linear

Characteristic curve of the valve.

Hysteresis

Available when Control type is b) or c)

Options:

Accurate	1%	2%	3%	5%	7%	10%	15%
----------	----	----	----	----	----	-----	-----

Default value: 2 %

Move the actuator only when the signal goes beyond this margin.

Control direction

Always available

Options:

Direct (0% = fully extended actuator; for push-to-close valves)	Reversed (0% = fully retracted actuator; for push-to-open valves)
--	--

Default value: Direct (0% = fully extended actuator; for push-to-close valves)

Valve direction of the input signal.

Cyclic timeout

Always available

Options:

No	1 min	2 min	5 min	10 min	15 min	20 min	30 min	45 min	60 min
----	-------	-------	-------	--------	--------	--------	--------	--------	--------

Default value: No

Raise an error if the actuator didn't receive a control signal for the time being. This indicates the frequency of the input signal.

Maximum valve stroke*Always available*

Parameter type: Integer
 Range: Min: 250, Max: 8500
 Default value: 6500
 Unit: μm

Limit the detection range for the calibration to this upper value.

Activate LED? (Only from firmware 0.2.0, KNX product catalogue 1.2)*Always available*

Options:

Yes	No
-----	----

Default value: Yes
 Deactivate LED for a discreet device.

Enable maximum stroke limitation?*Always available*

Options:

Disabled	Enabled
----------	---------

Default value: Disabled
 Enable the stroke limitation.

Limited stroke*Available when stroke limitation is enabled*

Parameter type: Integer
 Range: Min: 250, Max: 8500
 Default value: 6500
 Unit: μm
 Indicate the Limited stroke value.

Enable change-over?*Available when stroke limitation is enabled*

Options:

Disabled	Enabled
----------	---------

Default value: Disabled
 According to the selected trigger (telegram or binary input), set the cooling or the heating mode.

Change-over trigger*Available when Change-over is enabled*

Options:

KNX telegram	Binary input (Overrides binary input settings)
--------------	--

Default value: KNX telegram
 Select the source for the change-over.

Limited stroke when change-over is triggered*Available when Change-over is enabled*

Parameter type: Integer
 Range: Min: 250, Max: 8500
 Default value: 6500
 Unit: μm
 Override the limited stroke when the change-over is active.

Continues on next page

Mode when change-over is triggered

Available when Change-over is enabled

Options:

Cooling	Heating
---------	---------

Default value: Cooling

Selected mode when the change-over is active.

Parameters – Maintenance

Calibration at power on

Always available

Options:

None	Full	Fast
------	------	------

Default value: Full

Type of calibration done at power on.

Automatic calibration refresh

Always available

Options:

Never	Weekly	Monthly
-------	--------	---------

Default value: Never

Perform a calibration at this frequency.

Enable forced position?

Always available

Options:

Disabled	Enabled
----------	---------

Default value: Disabled

Enable the configuration of a forced position.

Forced position

Available when forced position is enabled

Parameter type: Integer

Range: Min: 0, Max: 10000

Default value: 0

Unit: per 10000

Value of the forced position.

Parameters – Binary input

Activate binary input?

Always available

Options:

Yes	No
-----	----

Default value: No

Enable the binary input.

Binary input trigger

Available when binary input is enabled

Options:

Open	Closed
------	--------

Default value: Open

Set the triggered state of the binary input.

Binary input action

Available when binary input is enabled

Options:

None	Go to position
------	----------------

Default value: None

Select the action to take when the binary input is triggered (can additionally activate the change-over through the corresponding option).

Binary input position

Available when binary input action is set to Go to position

Parameter type: Integer

Range: Min: 0, Max: 10000

Default value: 0

Unit: per 10000

Set the position to reach when the binary input is triggered (and the 'Go to position' option is selected).

Periodic transmission of input state

Available when binary input is enabled

Options:

None	Every 1 min	Every 2 min	Every 5 min	Every 10 min	Every 15 min	Every 20 min	Every 30 min	Every 45 min	Every 60 min
------	----------------	----------------	----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------

Default value: None

Transmit the binary input state at the selected frequency.

Transmission on change (Only from firmware 0.2.0, KNX product catalogue 1.2)

Available when binary input is enabled

Options:

Yes	No
-----	----

Default value: No

Transmit the new binary input state on status change.

Parameters – Error

Send status in case of error?

Always available

Options:

Yes	No
-----	----

Default value: No

Transmit the error status on the KNX bus when one appears.

Continues on next page

On valve clogging, perform unblocking attempts

Always available

Options:

Yes	No
-----	----

Default value: Yes

If the valve is clogged, performs three attempts to unblock it.

On valve clogging, move to fully open valve position

Always available

Options:

Yes	No
-----	----

Default value: Yes

If the valve is clogged, set the valve fully open.

Forced error position

Always available

Parameter type: Integer

Range: Min: 0, Max: 10000

Default value: 0

Unit: per 10000

Depending on the selected options, move to this position when an error is detected.

Move to error position on stroke detection failure

Always available

Options:

Yes	No
-----	----

Default value: No

Move to the defined position when a stroke detection failure happens.

Move to error position on cyclic instruction timeout

Always available

Options:

Yes	No
-----	----

Default value: No

Move to the defined position when a cyclic instruction timeout happens.

Move to error position on control value out of range

Always available

Options:

Yes	No
-----	----

Default value: No

Move to the defined position when the control value is out of range (for control values 0-10000).

